

WB-5A

Wireless Digital Video Baby Monitor Kit

User Manual



OVERVIEW

Wireless Camera



Back Controls

OVERVIEW

Wireless Monitor



VIEWING MODE DISPLAY



Setup steps

- Press key then press - + to choose options
- press OK to enter the options to start setting
- press - + to setting, press OK to Confirm the settings
- press key to exit

Intercom

- Press monitor Intercom button can talk to the camera
- Loosen the intercom button you can hear the sounds from the camera

PAIR

- press then press - + to choose this option
- press OK to enter the option to start setting
- press - + to choose different camera number, press ok to confirm and pair the camera
- Meanwhile press the pair button in front of the camera for 3s, then video comes from the camera

Note: product have already been paired before delivery



WHAT'S INCLUDED

Package Contents



Wireless monitor



Wireless camera



Monitor Adapter



Camera Adapter

Warning:

- This product is intended for indoor use only.
- Strangulation hazard-keep cord out of child's reach; never place camera or cords within 3 feet of crib or playpen; never use extension cords with AC Adapters. Only use the AC Adapters provided.
- Some adult assembly or installation required.
- This product contains small parts that may cause choking. Please keep small parts away from kids.
- This product isn't intended to replace proper supervision of kids, you must check your kid's activity, as this product, read won't alert parents to silent activities of a kid.
- Before using this product, read and follow all instructions and warnings on the product.
- Never use the transmitter or monitor near water, including near a bathtub, sink, laundry tub, wet basement, etc.
- This transmitter detects normal sound levels within a range of 2-3m (6-10 feet) from a child. If the child moves outside of this range it may not be able to detect the sound from kid.
- It is essential that you check the operating range and condition of the transmitter monitor on initial installation, and on a regular basis after that.
- Check reception regularly test monitor before use and after changing camera location.
- To prevent overheating, keep the product and AC power adapters away from any direct sunlight and heat sources such as radiators heat registers, cooking devices(e.g., stoves and ovens) and other appliances that produce heat(e.g., amplifiers, televisions and stereos).
- Ensure that the product is well ventilated during use. Avoid contact with pillows and furniture that may block ventilation.
- Use only the AC adapters avoiding pinch points otherwise you can damage the adapters.
- Plug the adapters into standard household current (100-240 volts AC).
- Place the AC adapters is plugged into a power source, don't touch the exposed end of the AC adapter's cord.
- When an AC adapter is plugged into a power source, don't touch the exposed end of the AC adapter's cord.
- Don't use extension cords with the AC power source, don't touch the exposed end of the AC adapter's cord.
- Caution if you use the system to watch a young kid, don't place the camera where the kid can reach.
- When using the system with only battery power and the charge is low, then the picture and or sound may be affected.

Installation :

Wireless Monitor :

- 1. Place the monitor in a place that will have clear reception with your camera.
- 2.Adjust the stand

Wireless Camera :

Before you install the camera, carefully plan where and how it will be positioned, and where you wil route the cable that connects the camerato the power adapter.
Before starting permanent installation, verify itd performanceby observing thr image on the monitor when camera is positioned in the same location / position whe it will be permanently installed and the monitor is placed in the location where it will be permanently installed and the monitor is placed in the location / position where it will be used most of the time.

Installation Warnings :

- 1.Carefully unpack the camera.
- (If you are installing cameras that didn't come with the system , please see the pairing camera section of this manual for details on installation.)
- 2.Mount the camera to te wall.
- 3.Adjust the viewing angle of the camera.

Troubleshooting	
Problem	Solution
No picture from a camera	1. Check all connections to the camera.Make sure the adapter is plugged in 2. Make sure that the cameras and monitor are both ON. 3. Make sure that the camea is in range of the monitor. 4. Make sure the camera and monitor are paired.
The picture is or has become choppy	The picture may become choopy when experiencing a lower frame rate (i. e. 10frames per second vs. a higher 20 frames per second) 1. Try moving the camera closer to the monitor. 2.Remove obstructions between the monitor and camera.
No sounds (even with both units turned on)	1. Make sure that the power adapter is connected to the camera. 2. The battery on the monitor may be dead, be sure to charge it using the adapter included. 3.The monitor may be out of range of the camera.
Emitting an high pitched noise / feedback	This sound is normal feedback which occurs if the monitor and camera are too close together. Move then further apart.